



Test procedures

BETA MAXI/ MINI (120 VOLT)

Symptoms	Test procedure	Probable cause and fix
Heat plate not heating	Rocker switch not lighting when switched on	1. Check power supply and fuse 2. Replace rocker switch
	Digital display not illuminating	1. Faulty fuse 2. Faulty fuse holder 3. Faulty wiring or connector 4. Faulty controller
	Open circuit on element	1. Faulty thermal cut-out 2. Faulty heat plate loom or connectors
	No power to heat plate	1. Faulty solid state relay 2. Faulty controller
Heat plate sticking when press is operated	When lever is moved up or down	1. Broken heat plate spring 2. Toggle assembly needs lubricating 3. Worn or broken toggle assembly
Pressure low when press is operated	When lever is moved down	1. Handwheel needs adjusting 2. Broken inner pin 3. Toggle assembly worn 4. Main casting cracked or broken
When pressing lever is raised to the up position (it keeps falling down)		1. Worn stop bar 2. Worn pivot pair