



### To adjust the controller

1. Press up-down-up-down buttons and the display will change to 'adj' and will flash, at this time the temperature can be changed using the up and down buttons.
2. The controller should be adjusted to read the same as the thermometer.
3. Press the mode button and go through the settings back to the actual temperature.